

# **Smooth Operator**

Gimbal Controller

User Manual v1.2

## **Disclaimer**

### ***For whom the controller is intended?***

If you fly multicopter or other RC model, if you have an experience in pilotage, if you can make correct movie, without vibrations etc, if you have patience to read the manual, if you can solve technical problems alone - this controller is for you.

It helps to improve the quality of movies offering many additional features like camera shutter control, switching signals from several video cameras etc.

### ***For whom the controller is not intended?***

If you are beginner pilot and have a problem with pilotage, your movies are full of vibration and shocks, you can't operate your model smoothly, don't have the basic skills modeler, you don't know how the Tx/Rx (BEC, servo etc) is working, you don't have the patience to read the manual like this - this product probably is not intended for you.

Remember, that our controller isn't "ready to fly" - before using it, it's necessary to read the manual and to spend some time setting the proper parameters of the controller.

If you don't have enough time or patience, DON'T BUY IT!

### ***What we DO NOT promise***

We don't promise a magic.

This controller is the electronic system, not a magic wand. If your movies are full of vibration and you can't operate your model smoothly, movies done with gimbal and controller will be probably even worse.

### ***Support***

As producer, we don't offer direct technical support by phone, Skype, e-mail etc.

If you have any problems look for the solution in the manual, or discussion forum. Last if you can't solve the problem feel free to write to us - if that problem really exist we will try to write the solution in our FAQ.

Except for exceptional cases we are not able to answer individual e-mails with request for technical help.

## ***Warranty***

We guarantee that controller works as manual described for 3 months from the date of purchase.

Failure that occurred during this period of time we will repair at our own expense. In case of any damages done by the user (for example because of wrong connections etc) we can try to diagnose and repair at cost of parts and labor. If controller is completely destroyed we can replace board with the new one at 1/3 of the stock price (we don't cover parcel cost in that case).

Specifications and designs are subject to be changed without prior notice for further improvement.

Trademarks and product names used herein are for identification purposes only and may be trademarks of their respective companies.

Thank you for purchasing of our controller. We hope, you will be satisfied and you will enjoy using it.

Before you start of using gimbal's controller you should read this manual first. If you don't understand it, try to read it again or ask for advice more experienced friends or you can also use discussion forum like RC groups. Internet is endless source of information - if you have a problem someone for sure will help you solve it.

Please remember to respect someone else's time, so first read the manual, then eventually ask for help if you are still confused.

# Introduction

Smooth Operator is an advanced electronic device designed to stabilize camera gimbals with up to three axes. It has built-in presets for the major types of gimbals available on the market (e.g. Cinestar, Photohigher, Photoshione).

Moreover, stabilization algorithm can be tuned via the configuration program to suit almost all gimbals, including hand-made ones.

All axes can be controlled manually with the standard RC receiver using normal or rate mode. In the normal mode inclination angle is directly proportional to the stick position while in the rate mode stick position determines angle change rate. Roll axis can be controlled in  $\pm 40^\circ$  range and tilt/pan (pitch/yaw) in  $\pm 360^\circ$  range which means can perform continuous rotation.

Additionally, controller is packed with a bunch of extended features like infrared trigger, video switch, electric relay and more.

All of them are handled and can be tweaked by the configuration tool (hereinafter called the configurator).

Basics:


- external IMU (3-axis MEMS gyro and accelerometer)
- 8 PWM outputs (50/100/200/400Hz selectable)
- 4 PWM inputs (8 channels in PPM mode)
- 3 to 1 video switch (high speed, low glitch switching)
- infrared trigger (experimental learning capability)
- reed relay (galvanic isolation, high speed)

## Hardware

Technically speaking, controller board is manufactured in Europe with the use of fully automated production line so the risk of possible failure is significantly reduced.



Controller hardware with the main parts marked is presented on the following pictures.

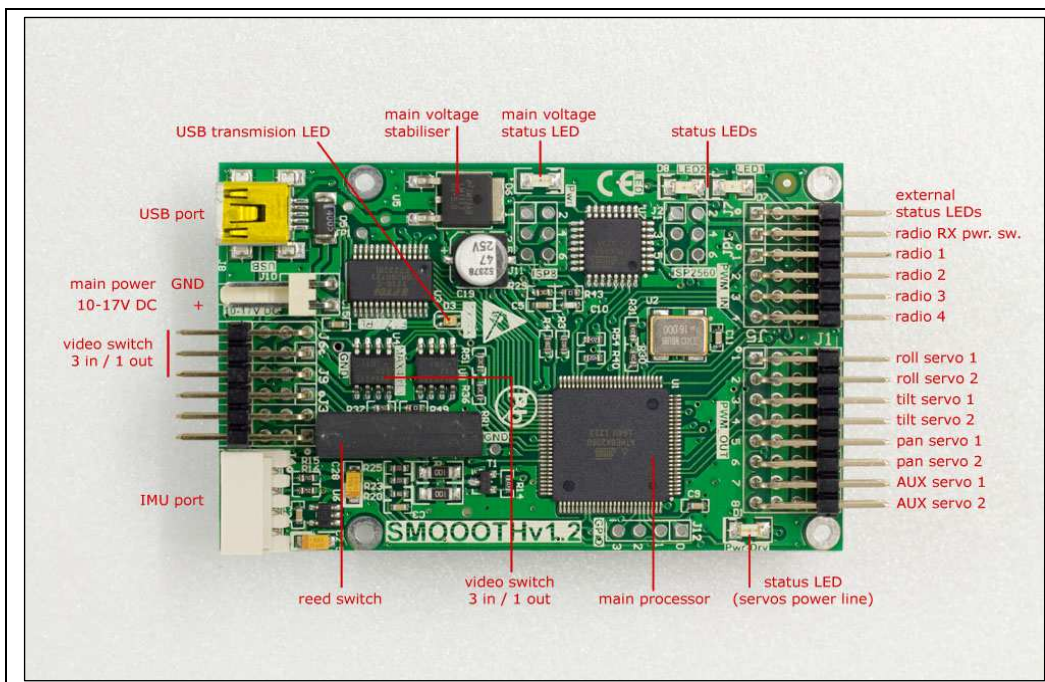


### *External IMU*

To calculate camera position controller uses external sensor (called IMU) consisting of 3-axis gyro and accelerometer which can be placed directly on the camera plate (so called advanced mode) or just on the gimbal frame (aka simple mode).

IMU module is a very sensitive device and has to be placed in a possibly vibration free area and away from any sources of radiation (transmitters etc.). Ideally, in the advanced mode sensor board should be mounted near the center of the camera plate which in most cases means just under the camera. Of course, you have to check if wires between IMU and the controller are not limiting gimbal movements and are free from entanglement.

Luckily, there are many supported module orientations as described in the Select IMU placement paragraph.

Due to sensor temperature drift it is strongly recommended to leave controller on for a few minutes in the flight environment and then restart the controller to perform gyro startup calibration again.

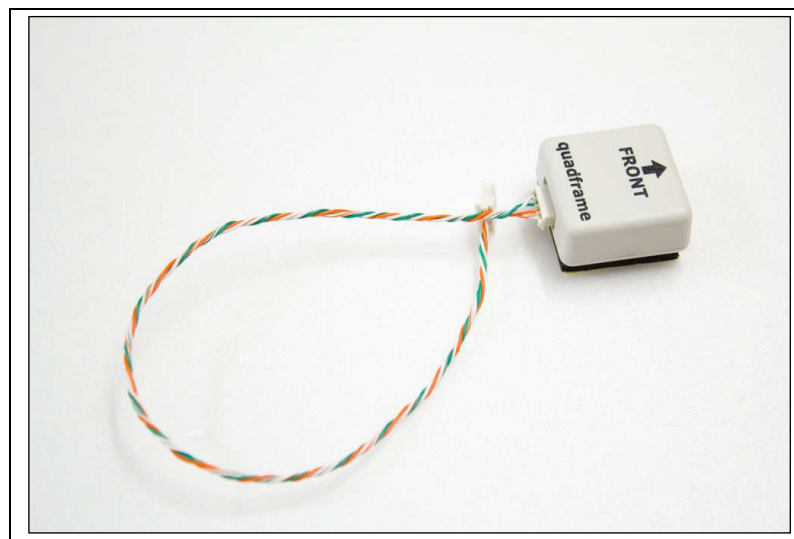


### ***PWM outputs***

Controller is equipped with eight PWM (Pulse Width Modulation) outputs so it can drive up to the eight servos. Six of them are directly driven by the stabilization algorithm (two for each axis) and the last two are auxiliary and can be assigned to the input channels with the configurator.

Very important thing is to understand that due to the **high** demand on **current** of modern servos PWM outputs are not powered by the controller itself. Therefore, external **voltage regulator** must be used and connected to the PWM out voltage pins (center and bottom) to supply the servos. You have to choose your regulator wisely, keeping in mind one digital servo can draw several amperes dependent of the load.

External voltage should be in 5-10V range but if higher than 5V (for faster/more torque servo operation) you should double-check if all connected servos support that.

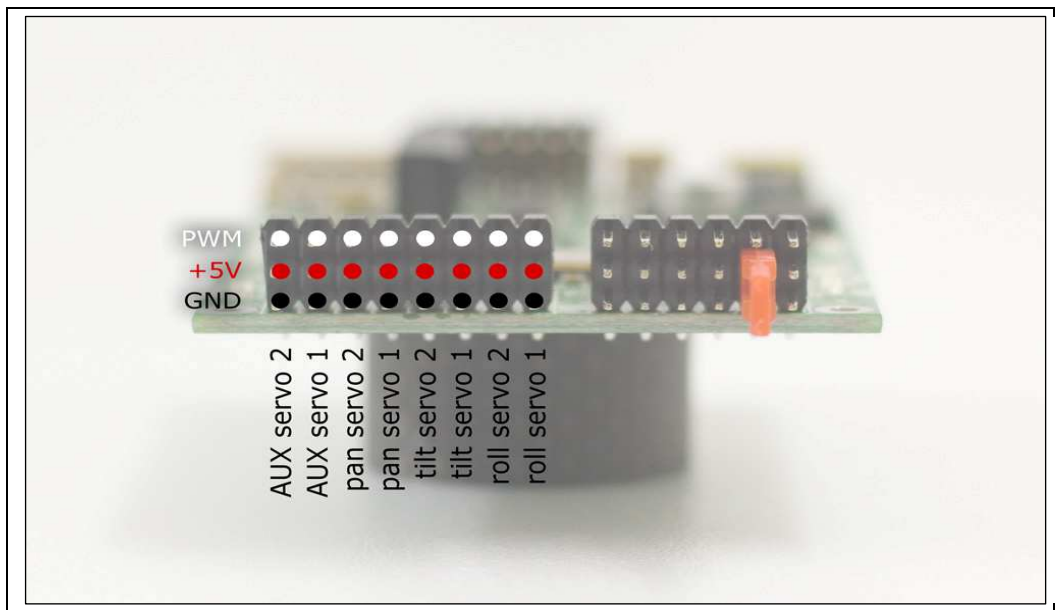


## ***PWM inputs***

There are four PWM inputs on the controller so you can connect maximum number of four receiver channels to control gimbal movements and extended features. If you need more channels you have to use receiver with the composite PPM (Pulse Position Modulation) output which should be connected to the input line #4. Doing this, you are enabling controller to use all eight channels encoded in the PPM frame.

By **default**, there is **no voltage** on the middle pin of each input connector in case you are powering your receiver from the external source. Otherwise, you can feed middle pin with 5V from the internal, controller's regulator using jumper as shown below. In that case you must be aware though that current draw on the input pins should not exceed 100mA in sum.


**Be aware to remove the radio power jumper in case you connect external voltage to the middle pin.**

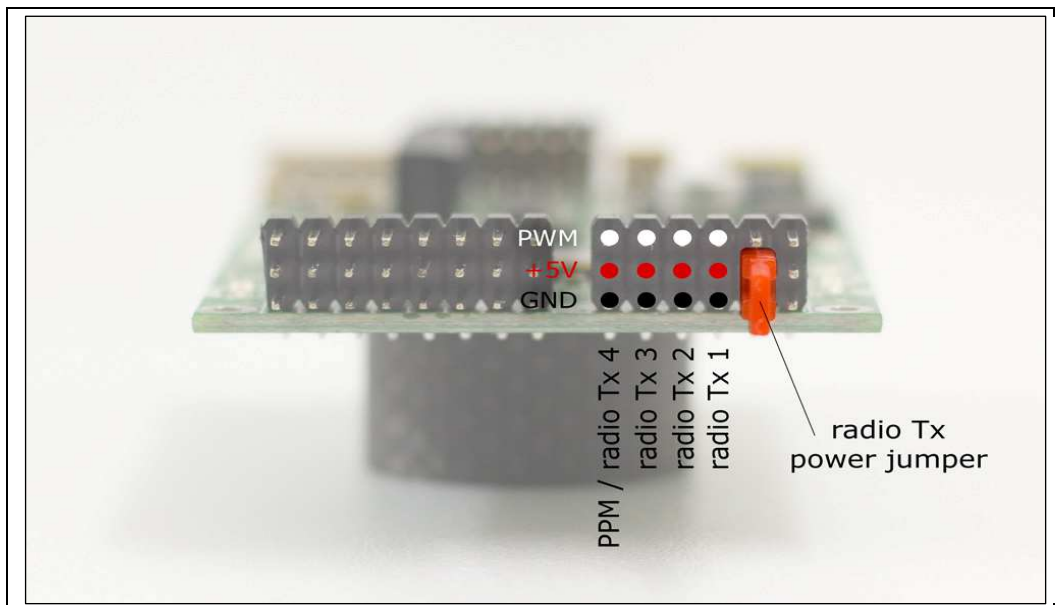

## Video switch

Controller is equipped with the video switching capability which means you can connect up to three video sources (e.g. two small FPV cameras looking straight and downwards plus the main camera) and send selected one to the operator with the use of external video transmitter.

Additionally, one of the inputs is designed such way you can directly plug-in standard FPV camera and it will be powered by the controller itself. Be aware though, that pin is **directly connected** to the **main power** connector so its voltage will be the same as the input voltage (in 7-20 V range).

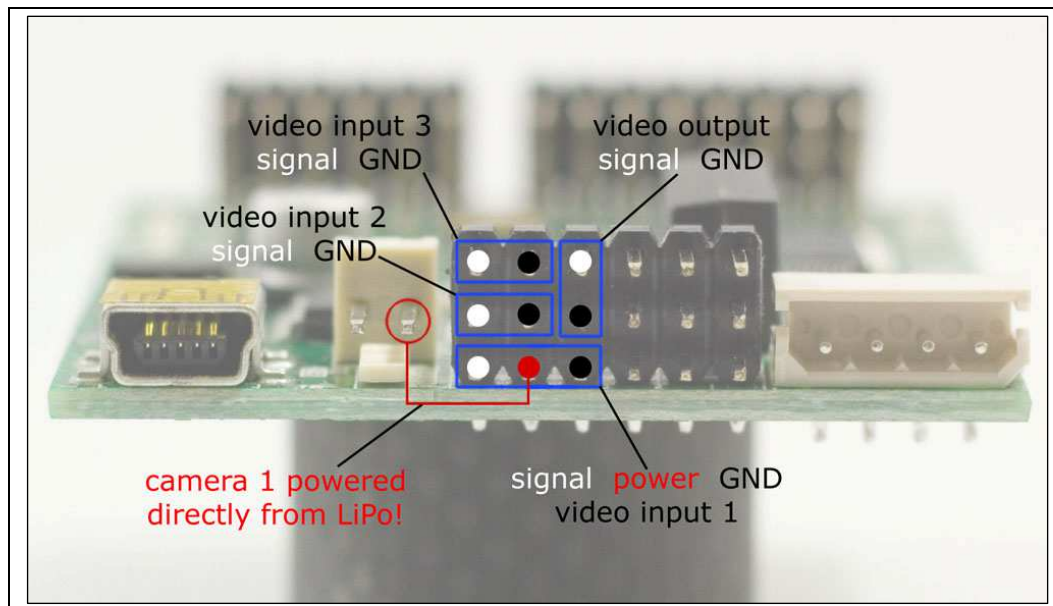


## Infrared trigger

Assuming your camera can be operated with the infrared remote you can use gimbal controller to mimic its functionality and for example send command to take a picture, start/stop recording or zoom in/out. To achieve that optional infrared transmitter must be connected to the IR port.

Configurator contains list of supported cameras&functions and will be gradually updated by the internet update function. What's more, controller can learn new infrared commands but we cannot guarantee it will work with every remote control unit. You can initiate learning process from within configuration tool after connecting IR receiver to the PWM input pin #1.




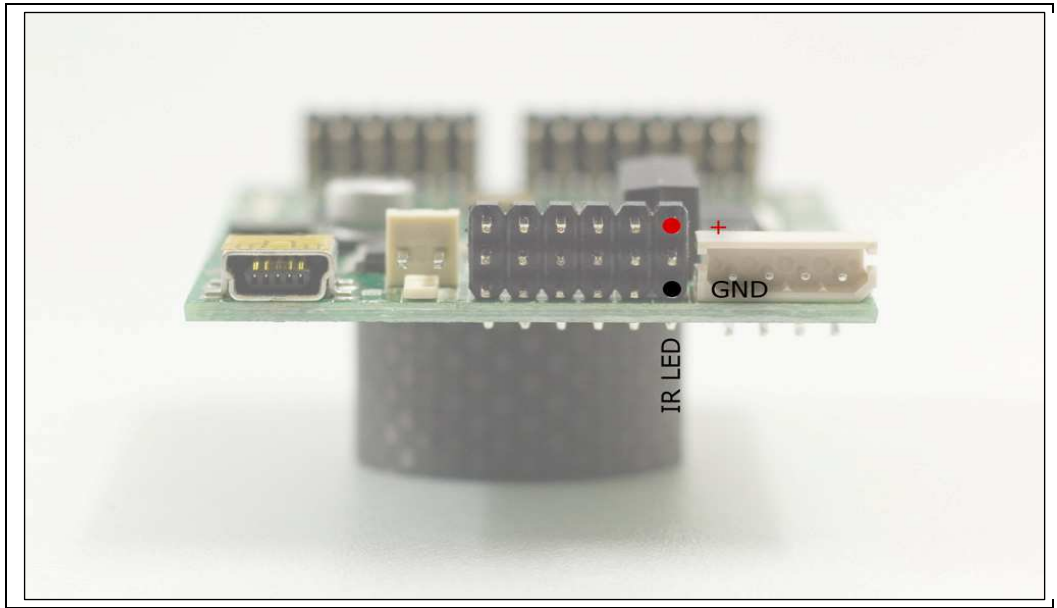

### ***Electric switch***

Controller is equipped with the reed relay that is galvanically isolated from the controller circuits so can handle relatively high voltage and current (max 250V and 1A).

Relay can open/close its circuit controlled by the input channel's data after doing appropriate assignment in the configurator.

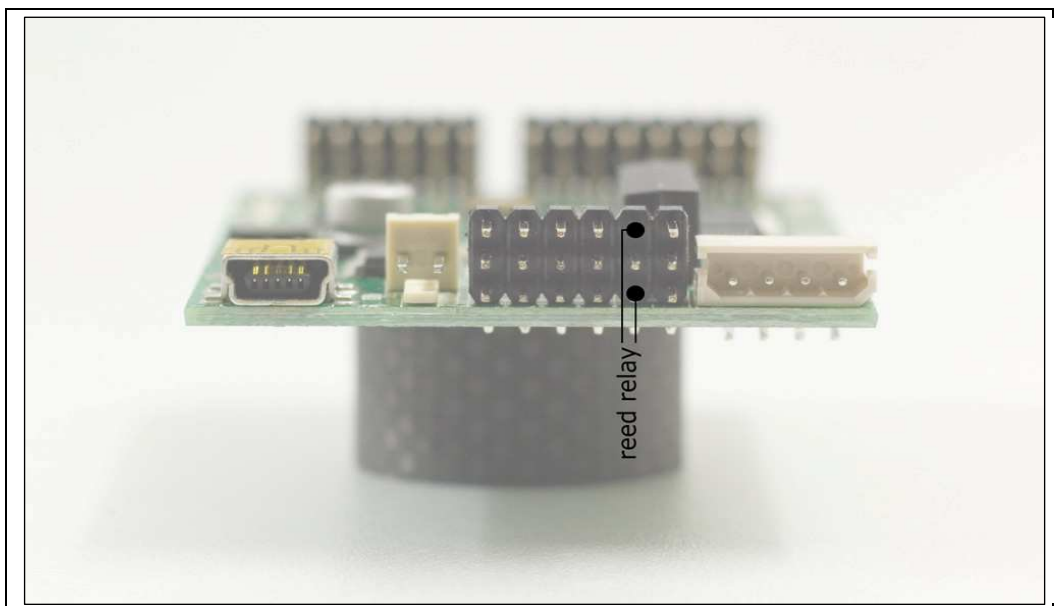

### ***Status leds***

There are several leds on the controller board to signal status of the major components.


Thus, there is a yellow main power led, yellow PWM outputs power led, bi-color USB connection transmit/receive (RX/TX) led and finally red and green controller status leds.

As of the controller status leds its outputs are duplicated to the external pins to allow connection of the bigger and more visible ones (one bi-color or two separate leds).

Meaning of the status led colors as follows:

- constant **green** – controller is working properly.
- slow blinking **green** – controller or servos voltages are below constraints set in the configurator. Refer to the documentation of *Miscellaneous* tab.
- fast blinking **red** – sensors are calibrating. Very important thing is to **not move sensors** during this process, otherwise calculated angles may not be accurate and can drift.
- slow blinking **red** – some sensor's I2C bus errors occurred. Check if IMU's wire is properly connected and no external interferences exist (e.g. strong electromagnetic field).
- constant **red** – controller program is halted due to serious hardware error. If problem persist contact customer service.

More status leds color combinations can be found in the Troubleshooting paragraph.

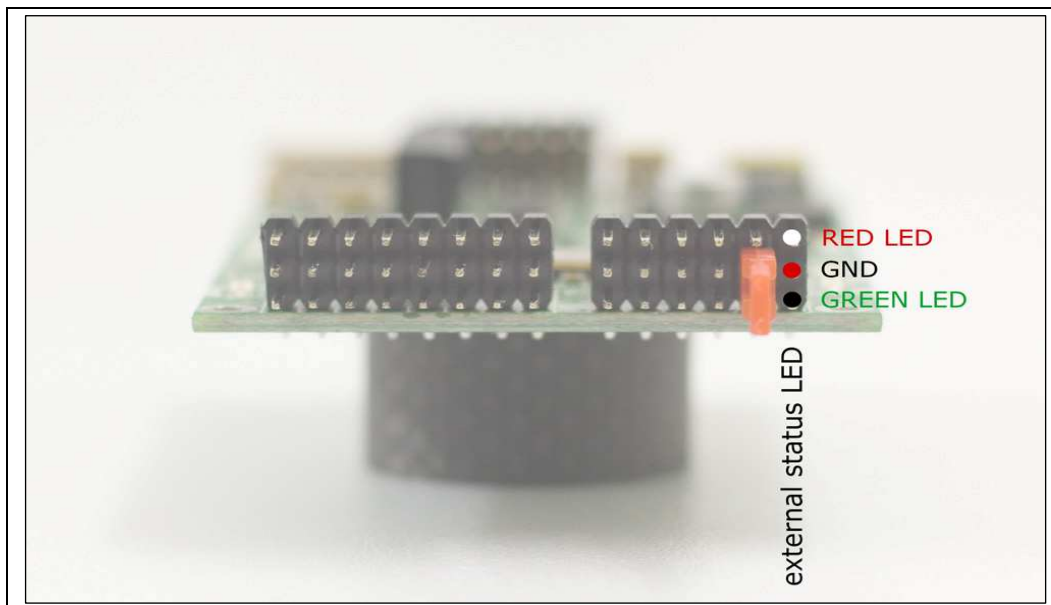

## Configurator

To initialize Smooth Controller and setup for use with your rig you have to run configuration tool aka configurator. It is very straightforward application, written in Java so in general can be run on most operating systems that supports its native serial communication library (Windows, Linux, Mac). For now it was only tested on Microsoft Windows 2000/XP/7 though.


Configurator has no installer so it only needs to be unpacked from the archive and run using one of the dedicated executables. After application windows appears just connect the controller with your computer using supplied USB cable and hit **Connect**. Controller RX/TX and sensor calibration leds should blink during connection is made and after that **Inputs** tab should open. Remember **not to move** sensor plate while calibration led is blinking, otherwise stabilization angles can drift.

Warning: **do not connect** any **servos** at this time, just IMU and USB cable.

After initial setup is done and controller is correctly configured to work with your gimbal you don't have to disconnect power from the servos to connect to the configurator. Furthermore, all changes made in the configurator are instantly transferred to the controller and activated. Though, do not forget to save changes permanently using **SAVE SETTINGS** button before disconnecting.

If any configurator error occurs its details should be written in the application's "log" folder so you can send files from there to the manufacturer for debugging purposes.

## Overall

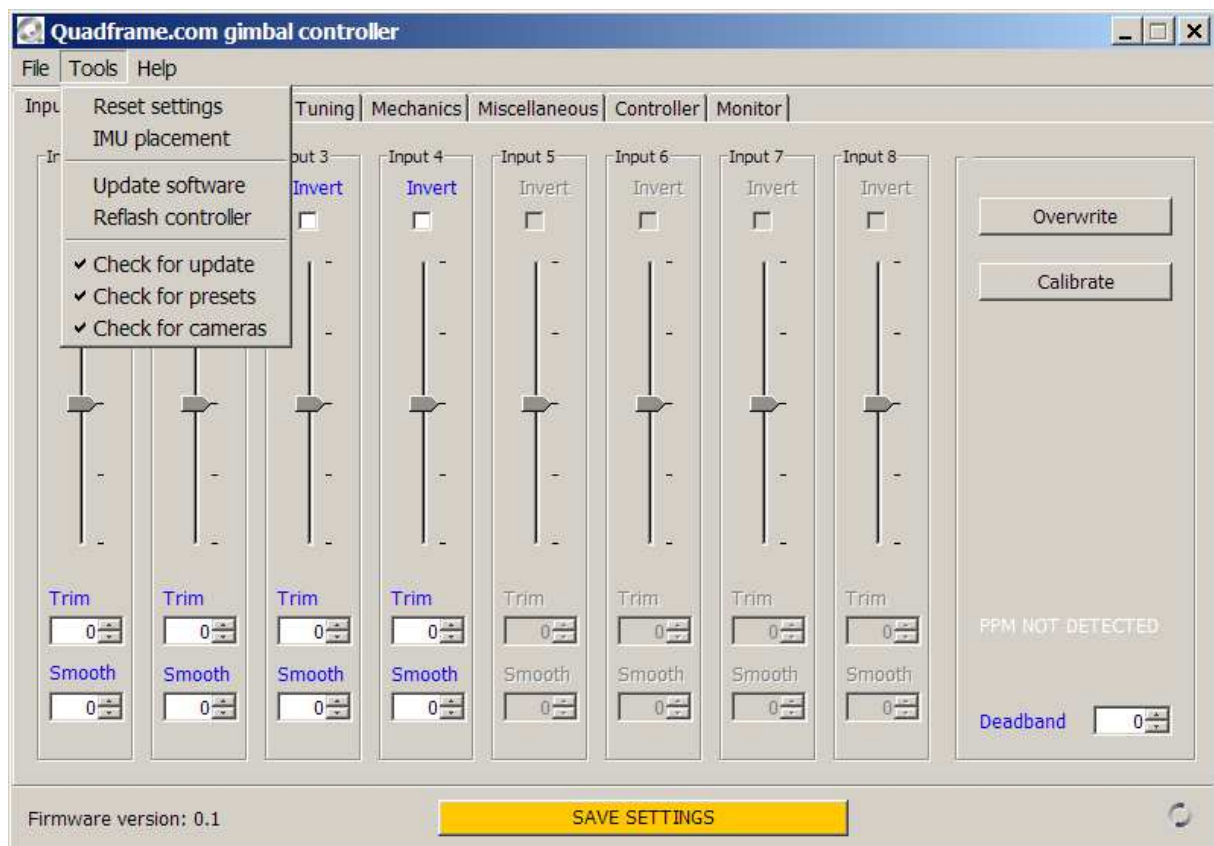

Main window consists of the menu bar, the central workplace area and the bottom, status bar.

Menu bar has the following options:

File -> Connect – opens **Connect** window

File -> Disconnect – disconnects from the controller

File -> Import – imports all controller settings from file (all current values will be lost)

File -> Export – exports all controller settings to file (profiles are not exported)

File -> Exit – exits configurator

Tools -> Reset settings – resets all settings of the controller to the default

Tools -> IMU placement – opens **Select IMU placement** window

Tools -> Update software – opens **Update components** window

Tools -> Reflash controller – opens **Reflash controller** window (Windows only)

Tools -> Check for update – verifies if controller or configurator update is available on connect

Tools -> Check for presets – verifies if **Mechanics** tab presets update is available on connect

Tools -> Check for cameras – verifies if camera's infrared codes update is available on connect

Help -> About – you know what ;)

Workplace area contains tabbed panels where functions that allow to tweak particular settings of the controller are grouped by type.


Content of the tabs are described in the next paragraphs.

Status bar consists of information block and the **SAVE SETTINGS** button.

Information block displays version of the controller's firmware and messages that are results of executing particular actions of the configurator (errors are marked **red**).

**SAVE SETTINGS** button saves all changes made to the controller in its persistent memory so has to be used before disconnecting if you want them to last after controller's restart.

## Connect

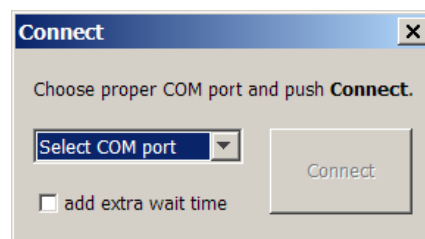


Before opening this window you should connect the controller and wait some time till the computer recognizes it and installs its communication port. After that you can select appropriate port and hit **Connect** button.

In case of the connection error you can check if **add extra wait time** function helps or retry using another USB port. If there are no available ports on the list verify if port is visible in the system device manager and if so look for errors in the application's "log" folder.

Important thing to note is that during connection is being made sensor calibration occurs, the same way as during normal power up (if startup calibration is selected). Thus, you should not move IMU plate till connection window closes itself or disable startup calibration on the **Miscellaneous** tab.

## Select IMU placement

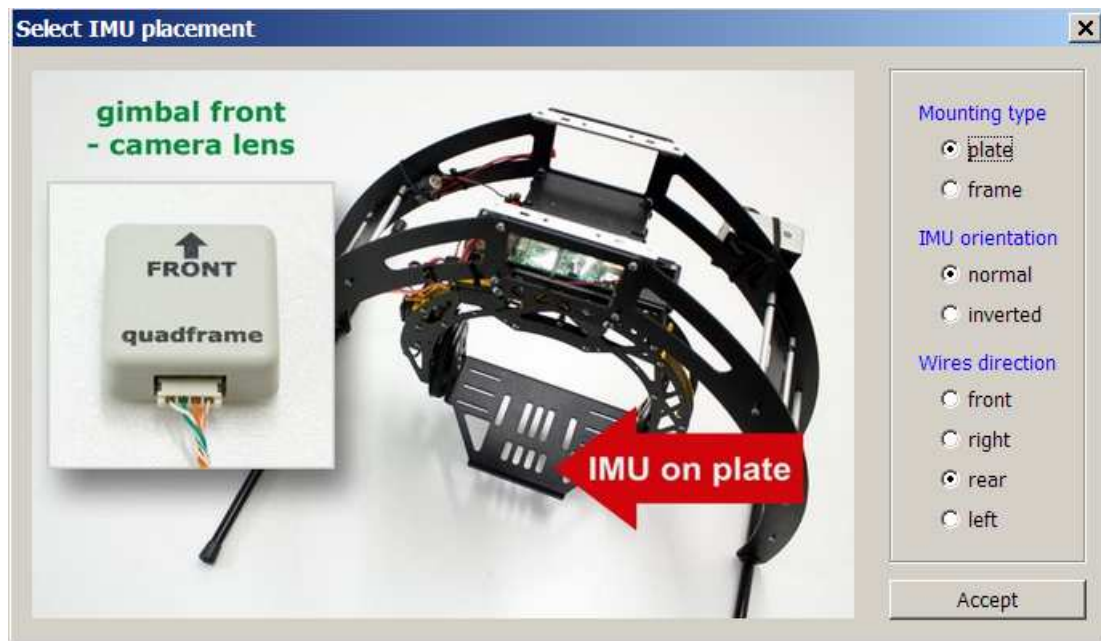

IMU placement window is available only after the controller is connected to the configurator and is designed to define the actual placement of the IMU board.


Mounting type field is very important and configures the controller to use simple (frame) or advanced (plate) mode for the roll and tilt axes stabilization.

In the simple mode, where IMU has to be fixed to the gimbal frame (its not-moving part) only proportionals for roll&tilt axes have to be set (refer to the Tuning tab paragraph). In the advanced mode (aka plate) PID loops are responsible for roll&tilt stabilization so proper values are to be set for these axes at the Mechanics tab. Pan axis requires PID tuning for both mounting types.

Horizontal arrow describes if board has normal or inverted position and vertical arrow means which way sensor wires go.

Very important thing is to **disconnect power** from servos or at least **disable stabilization** on all axes before changing placement's settings to avoid abnormal gimbal behavior.


## Update components

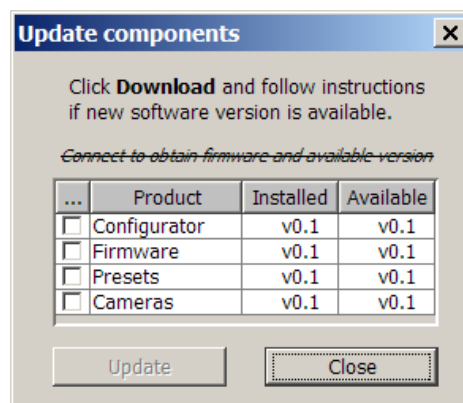

Using this window you can internet update some parts of the configurator application in case any update is available from the provider. Version check occurs while the connection to the controller is being made and if a new version is available or version check fails relevant information is shown on the bottom status bar. You can read about the changes in the latest version by placing the cursor over the product line.

After update is completed you have to restart the configurator and in case new Firmware was downloaded update the controller manually using Tools->Reflash controller function.


## Reflash controller

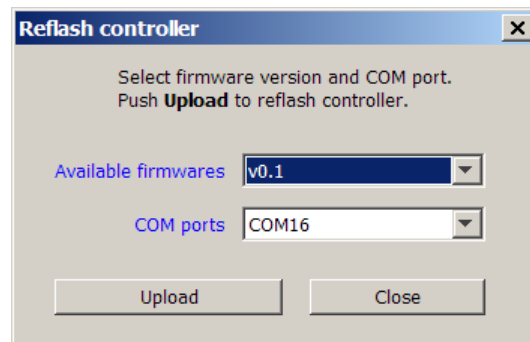

After new version of the firmware is downloaded by the *Update software* function you can upload it to the controller using this window.

We are sorry, but for now that function works only on Microsoft Windows.

## Inputs tab

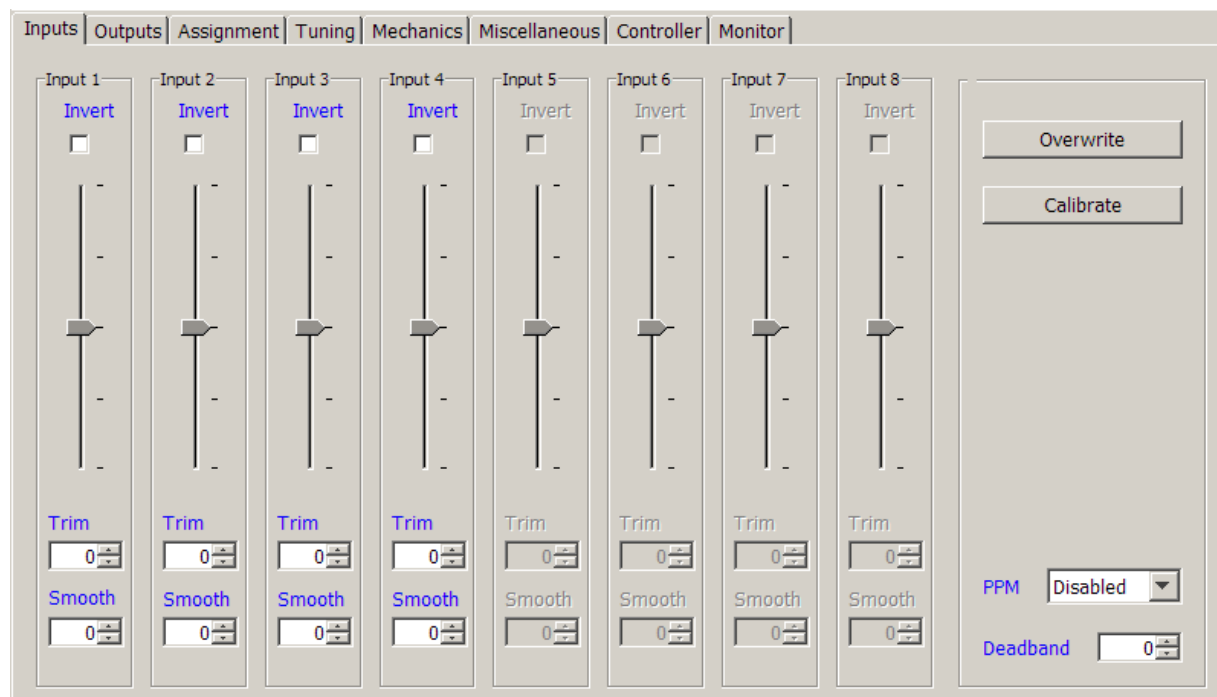

**Inputs** tab is directly related to the controller's PWM inputs and displays values for all available input channels.

In case of using PPM signal (refer to the PWM inputs paragraph) you have all, eight channels active and only four otherwise.

Input -> Invert – inverts input value

Input -> Trim – adds/subtracts selected amount from the input value (in microseconds)

Input -> Smooth – smoothes input value by the selected factor


PPM – controls PPM support on Input 4 (disable in case of problems with the ordinary PWM)

Deadband – introduces a deadband to the channel reading to eliminate noise (in microseconds)

Overwrite – allows to manually overwrite input values by moving the sliders

Calibrate – opens **Calibrate inputs** window

## Calibrate inputs

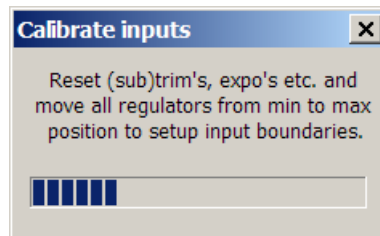


Calibrate function should be activated if you want controller to know actual ranges and middle values of the input channels. Namely, at the first run and every time you change radio or its settings.

Before doing calibration you should reset all radio settings (e.g. trims, expos, ranges) to the default. Calibration process is done in two steps. At first, channel ranges are determined so you have to move all regulators from min to max position while progress bar is visible. In the second step input readings boundaries are corrected in case middle input value is not exactly in the half way of the min and max position. Correction is made only if deviation is small so you don't have to center knobs etc.

After calibration end changes have to be saved manually using **SAVE SETTINGS** button.

## Outputs tab

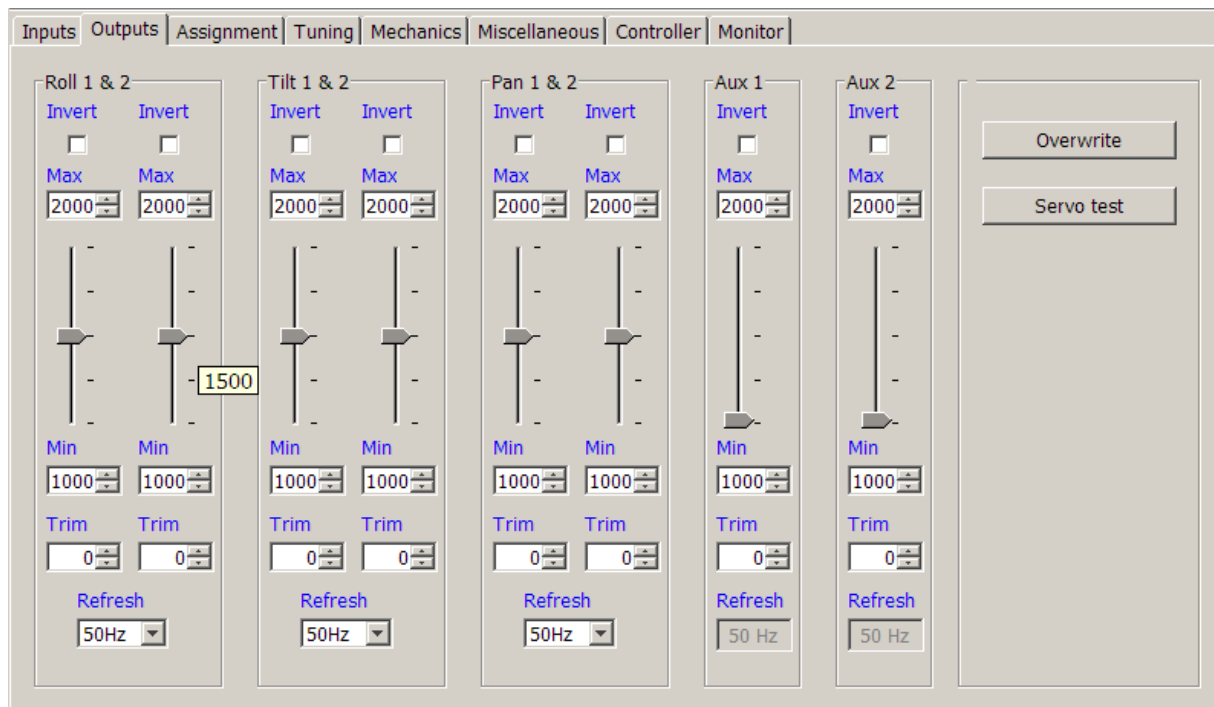

**Outputs** tab gives you direct view on the PWM output servos values (refer to the PWM outputs section). It means each slider shows signal level that is being currently send to the corresponding servo.

Output -> Invert – inverts output value (servo will move in the opposite direction)

Output -> Min – minimum output value that is allowed (in microseconds)

Output -> Max – maximum output value that is allowed (in microseconds)


Output -> Trim – trim for the middle output value (in microseconds)

Output -> Refresh – refresh rate for the PWM signal (higher means better but servo must support it)

Overwrite - allows to manually overwrite output values by moving the sliders

Test – opens **Servo test** window (only for servos with pots)

## Servo test

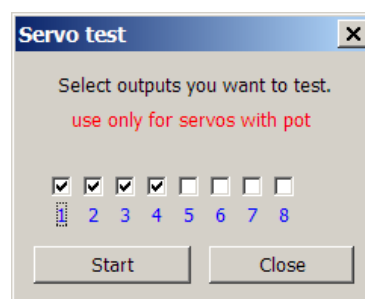

Servo test window lets you check if your servos are moving smoothly in their full range which means from the defined by the configurator min to max value.



Very **important** thing to note is that function will only **work** properly with the servos that have internal or external **pot** connected so for example pan axis servo will be probably not suitable.

## Assignment tab

The screenshot shows the 'Assignment' tab of a software interface. It contains several sections for configuring different functions:

- Roll:** Includes a dropdown menu, a 'Max angle' field set to 40, a 'Rate mode' checkbox, and a 'Rate factor' field set to 30.
- Tilt:** Similar to Roll, with a dropdown menu, 'Max angle' field set to 40, 'Rate mode' checkbox, and 'Rate factor' field set to 30.
- Pan:** Includes a dropdown menu, a 'Max angle' field set to 90, 'Rate mode' checkbox, and 'Rate factor' field set to 30.
- AUX:** Features two dropdown menus labeled 'Servo 1' and 'Servo 2'.
- Profile:** Has a dropdown menu and three buttons labeled 'Low', 'Mid', and 'High', each with a '\*default\*' dropdown above it.
- Video:** Similar to Profile, with a dropdown menu and 'Low', 'Mid', 'High' buttons, each with a '\*disabled\*' dropdown above it.
- Trigger:** Includes a dropdown menu, a 'Low' button with a dropdown, an 'Interval' field set to 99, and a 'High' button with a dropdown.
- Panorama:** Features a dropdown menu, a 'Camera' button with a dropdown, a 'Factor' field set to 90, and three checkboxes labeled 'Low', 'Mid', and 'High'.
- Switch:** Includes a dropdown menu, a 'Hold' field set to 0, and three checkboxes labeled 'Low', 'Mid', and 'High'.

Content of this tab is related to the controller PWM inputs that can be configured at the **Inputs** tab. Here, you can assign input channels to change inclination of each axis and to control all, additional features controller provides.

## Roll/Tilt/Pan

If you want to alter camera plate inclination using your RC regulators you must assign appropriate inputs to the angles that are to be changed.

Primary thing to consider is whether you will use normal or rate mode to control each angle. In the **normal** mode current angle directly corresponds to the regulator's position in range specified by the value of the **Max angle** field (+/- field value). For example, if the regulator is in middle position you will always get neutral angle. If max angle is set to 40 and you'll move your regulator to the min position corresponding angle is set to -40 degrees from neutral. Similarly, for max regulator position angle will be set to +40 degrees from neutral.

In the **rate** mode by holding regulator off from neutral position you will be constantly adding or subtracting some amount of degrees to the current angle. Rate of the angle change is proportional to the regulator's position and the value of **Rate factor** field. Though, max angle constrain (**Max angle** field) is still valid so you cannot exceed its value. As you see in the rate mode middle regulator's position does not mean neutral angle but just not to change angle at all.

Do not forget to properly **calibrate** your radio using the **Inputs->Calibrate** function before doing assignment if you haven't done it before.

Note, that axis movements are coordinated by the same algorithms as the main stabilization so if you can not achieve satisfactory results it may be required to modify settings at the [Mechanics](#) and/or [Tuning](#) tab.

Input field – selects input that will be assigned to that axis

Max angle – sets max angle for the input control

Rate mode – sets angle change behavior

Rate factor – sets amount of angle change in rate mode

## AUX

This module lets you assign input channels to move auxiliary servos at PWM outputs #7 and #8.

If inputs are calibrated properly ([Inputs](#) tab) whole range of the regulator should correspond to the full servo range set on the [Outputs](#) tab with min and max values. If you want to reverse servo movement just [Invert](#) assigned channel or appropriate output.

Servo 1 – selects input that will be assigned to the output #7

Servo 2 – selects input that will be assigned to the output #8

## Profile

This, very important feature lets you assign input channel to switch between configuration profiles created at the [Tuning](#) tab. Thus, you can simply change gimbal behavior e.g. its dynamic, trim angles or just enable/disable stabilization during flight.

To use that feature just select adequate profiles in the subsequent fields that correspond to the input channel's low, mid or high states.

Profile named *\*default\** means no custom profile was selected and controller is using base settings.

Important thing to note is that function **does not work** if configurator is **connected** to the controller.

Input field – selects input that will be assigned to switch profiles

Low – selects profile that will be assigned to the input's LOW state

Mid – selects profile that will be assigned to the input's MID state

High – selects profile that will be assigned to the input's HIGH state

## Video

You can utilize video feature in case you have connected up to three video sources to the controller and want to switch between them.

To use that feature just select adequate video inputs in the subsequent fields that correspond to the input channel's low, mid or high states.

Input named *\*disabled\** means video output is disabled (blank).

Technical aspects of the video switch function are described in the Video switch section.

Input field – selects input that will be assigned to switch video inputs

Low – selects video input that will be assigned to the input's LOW state

Mid – selects video input that will be assigned to the input's MID state

High – selects video input that will be assigned to the input's HIGH state

## Trigger

Assuming you own infrared transmitter diode and the camera that is capable of receiving commands from the IR remote you can use that panel to assign commands to the input channel's low or high state. Therefore, you can trigger up to two, separate functions on your camera.

To use that feature just select adequate commands in the subsequent fields that correspond to the input channel's low or high states.

You can also configure the behavior in case trigger state is hold for some time with the *Interval* field. Moreover, there is also an experimental function that enables the controller to learn new infrared sequences from the existing remote. To do that you have to select the *\*NEW\** option from the cameras list (last one).

Technical aspects of the infrared function are described in the Infrared trigger section.

Note, that direct sunlight can "blind" IR receiver module in the camera so it may not respond to the command send by the controller.


Input field – selects input that will be assigned to trigger infrared

Interval – sets activity interval in seconds if trigger state hold (set 0 for continuous and 99 for single)

Low – selects command that will be assigned to the input's LOW state

High – selects command that will be assigned to the input's HIGH state

## Learn IR sequence

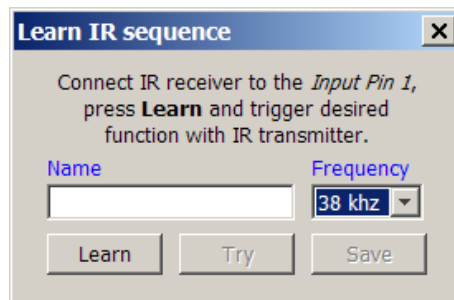


Learn IR window can be opened from the *Trigger* or *Panorama* cameras list.

It is an experimental feature so you must understand we cannot guarantee it will work in every case.

First thing you have to do is to prepare IR receiver unit and connect it to the PWM input pin #1.

In the scenario where IR carrier is modulated with frequency in 33 to 56Khz range (as in most IR remote controllers) receiver schematic is relatively simple and costless.

Unfortunately, there are also remotes where carrier is not modulated at all (e.g. Canon) and you have to use plain IR photodiode and some amplifier to handle that.

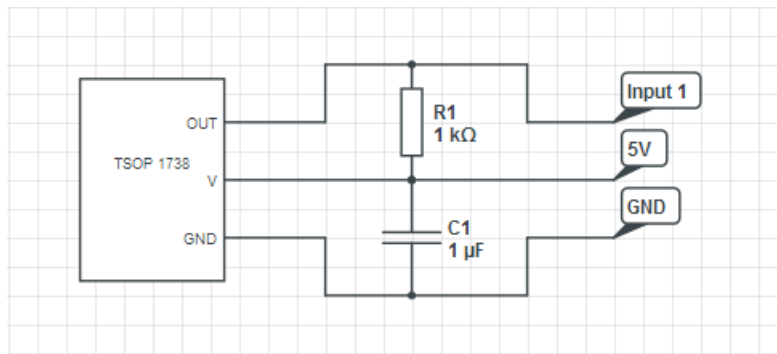

Note, that infrared trigger function supports only sequences where carrier is modulated with 33/36/38/40/56Khz frequency or not modulated (constant).

You also have to remember that the new IR sequence definition (and the whole cameras list) is held in the application folder not the controller.

Learn – executes IR learning function

Try – sends received IR sequence to try whether it is working (active only after sequence received)

Save – adds IR sequence to the cameras list (active only after sequence received)

Frequency – selects carrier frequency for the transmission (visible only after sequence received)

Name – sets name for the new camera (visible only after sequence received)

## Panorama

By using this feature you can automate making panorama photos or just simple 360 degrees look around effects while filming.

Ordinary panorama mode is chosen if you select appropriate IR sequence in the **Camera** field.

If this mode is activated by holding appropriate input state gimbal will move on the pan axis by the angle specified with the **Factor** field value. After desired angle is reached controller will send IR sequence to make the photo, wait for some time and then move on to the next angle unless full circle is made.

Remember to use short exposure times (sometimes needs higher ISO sensitivity) and manual focus set to infinite (aka Landscape scene) for best aerial photos experience.

Movie panorama mode is chosen if you leave **Camera** field blank.

In this mode gimbal will do full circle with the speed specified by the **Factor** field value.

Note, that you have to **hold** activation **state** during the whole process unless function will be interrupted and gimbal will return immediately to its initial position.

Pan axis stabilization must not be disabled using *PWM off* type for the panorama function to work. Be aware though, that if other **disabled type** is set it will be **automatically reset** by the Panorama mode and therefore **Pan stabilization** must be **configured** and working properly.

Input field – selects input that will be assigned to activate panorama

Camera – selects IR sequence that will be executed after angle reached

Factor – sets angle in degrees between photos or rate of rotation if camera is not selected

Low – if checked panorama will be activated if LOW state is held

Mid – if checked panorama will be activated if MID state is held

High – if checked panorama will be activated if HIGH state is held

## Switch

To use that feature you have to assign required input and select which states will close the relay.

If you want to hold closed state for some time after input is released you can configure that using the **Hold** field.

Technical aspects of the switch function are described in the Electric switch section.

Input field – selects input that will be assigned to activate switch

Hold – time in seconds to hold closed state after channel is released

Low – if checked relay will be activated if LOW state is set

Mid – if checked relay will be activated if MID state is set

High – if checked relay will be activated if HIGH state is set

## Tuning tab

The screenshot shows the 'Tuning' tab of a software interface. At the top, there are tabs for 'Inputs', 'Outputs', 'Assignment', 'Tuning' (selected), 'Mechanics', 'Miscellaneous', 'Controller', and 'Monitor'. Below the tabs, there are three main sections: 'Profiles', 'Hints', and three axis configuration panels for 'Roll', 'Tilt', and 'Pan'.

**Profiles:** A dropdown menu shows '\*default\*'. Below it are 'Create', 'Save', and 'Remove' buttons.

**Hints:** A text box contains the following text: 'After selecting right PID's use sliders to **fine tune** gimbal to suit your needs. You can store settings in the **named profiles** and assign them to the radio inputs. Profile list is stored in the **application folder** not in the controller.'

**Roll:** Contains settings for Proportional (-180), Trim base level (0,0), Stab. disabled (a green bar), Aggressivity (a slider), Smoothing (a slider), Sensitivity (a slider), and Speed (a slider).

**Tilt:** Contains settings for Proportional (130), Trim base level (0,0), Stab. disabled (a green bar), Aggressivity (a slider), Smoothing (a slider), Sensitivity (a slider), and Speed (a slider).

**Pan:** Contains settings for Trim base level (0,0), Stab. disabled (a red bar labeled 'PWM off'), Aggressivity (a slider), Smoothing (a slider), Sensitivity (a slider), and Speed (a slider).

Tuning tab allows you to tune gimbal behavior and additionally create some custom sets of settings and save them in a numerous profiles. Furthermore, up to three profiles can be assigned to the input channel and switched whilst in midair. That way you can for example change gimbal responsiveness, disable stabilization or change trim angle without the need for connecting the configurator.

In the **simple mode**, where IMU is fixed to the gimbal frame (refer to the Select IMU placement paragraph) **Proportional** values are to be **experimentally** set for the roll and tilt axes to achieve best hold of the horizon.

**It is highly advised that you should start with the frame mode first.**

Using the **advanced mode** (IMU at the camera plate) you must first ensure right PID's are configured on the **Mechanics** tab and **stabilization** is at least roughly working before starting the fine tuning process.

**Profiles** group lets you create, switch and finally remove profiles which simply are the named sets of settings from the **Roll**, **Tilt** and **Pan** panels. To create new profile just set all settings as desired and click **Create** button. Then, name field will appear where you have to input unique name for your profile and finally push **Save** button. The same button you will have to use in case you are going to update your profile's configuration. Remember, that after you modify profile which is already assigned to the input channel you have to use global **SAVE SETTINGS** button to make changes persistent in the controller also.

Profile named *\*default\** means no custom profile was selected and controller is using base settings. You have to be aware though, that profile list is **stored locally** that is in the folder where configurator application is placed. That means may **not** be **visible** after you connect the controller to the different instance of the application.

Using tuning panels for the roll, tilt and pan axes you can modify simple mode's proportional factor, base inclination of the gimbal plate, disable stabilization and at least fine tune the way controller will respond to the gimbal movements. Fine tuning is a very subtle process and often has to be done in case of the new camera model, weather conditions or even flight style changes. Fortunately, it is often enough to change only **Aggressivity** setting but in some cases there is also a need to modify PID variables on the **Mechanics** tab (advanced mode only or pan axis).

To perfectly refine tuning settings you can use Inflight mode that allows you to modify **Aggressivity**, **Smoothing** and **Sensitivity** factors from your radio during flight. Such function is available at the Miscellaneous tab (refer to the Miscellaneous tab section).

Profiles -> Profile List – selects current profile

Profiles -> Create – displays the new profile **Name** field

Profiles -> Name – defines name for the new profile (must be unique or profile will be replaced)

Profiles -> Save – creates/updates profile configuration

Profiles -> Remove – deletes current profile from the list

Axis -> Proportional – horizon hold factor (simple mode only - IMU on the gimbal frame)

- \* 0 means no stabilization

- \* negative value means inverted response

Axis -> Trim base level – changes base plate position (in degrees)

Axis -> Stab. disabled – disables stabilization when selected using specific **Disabled Types**

Axis -> Aggressivity – scales response from the stabilization algorithm

- \* higher value means more aggressive response to the angle deviation

- \* too high value can cause instability and oscillation particularly for rapid shifts

- \* in case you are maxed out set to 50% and try to retune you PID values

Axis -> Smoothing – applies smoothing filter for stabilization algorithm

- \* higher value means more filtering and more fluent response

- \* too high value can cause instability and oscillation particularly for rapid shifts

Axis -> Sensitivity – sets algorithm sensitivity for small angle changes

- \* higher value means higher sensitivity and possibly better response resolution

- \* higher sensitivity will need servos with better resolution and lower deadband
- \* higher sensitivity will need gimbals with better precision and higher gear rate
- \* too high value can cause permanent servo play and jittering

Axis -> Speed – limits maximum angle change rate aka stabilization speed

- \* can be used if you don't want fast transitions

**Disabled types** are as follows:

*PWM off* – turns off PWM on both servos (most servos will move freely)

*Servo middle* – sets both servos to middle (+/- Outputs trim)

*Input tilt 1* – *Servo middle* plus assigned Input response limited to 10% range

*Input tilt 2* – *Servo middle* plus assigned Input response limited to 50% range

*Input tilt 3* – *Servo middle* plus assigned Input response in 100% range

*Input rate 1* – *Servo middle* plus assigned Input response in Rate mode limited to 10% range

*Input rate 2* – *Servo middle* plus assigned Input response in Rate mode limited to 10% range

*Input rate 3* – *Servo middle* plus assigned Input response in Rate mode in 100% range

**Stabilization is working only** if **Stab. disabled** field is blank (no option set).

## Mechanics tab

The screenshot shows the 'Mechanics' tab in a software interface. It contains several sections:

- Gimbal model:** A dropdown menu set to 'Cinestar II'.
- Warning:** A text box with the following content:
 

Servo movements may get **unstable** during manual tuning!

Before tuning pids reset **Aggressivity** to 40%, **Smooth** to 0%, **Sensitivity** to 90% and **Speed** to 100% on the Tuning tab.

If you can not tune your gimbal to work properly consider using **faster** servos with **more torque** and **less deadband**.
- Stabilization PIDs:** Three columns for Roll, Tilt, and Pan axes.
  - Roll:** Preset dropdown, Algorithm 'Type B', P slider at 300, I slider at .60, D slider at 100, Maximum I 200, Center aligned checkbox.
  - Tilt:** Preset dropdown, Algorithm 'Type B', P slider at 200, I slider at .60, D slider at 100, Maximum I 200, Center aligned checkbox.
  - Pan:** Preset dropdown, Algorithm 'Type B', P slider at 100, I slider at .04, D slider at 20, Maximum I 200, Center aligned checkbox checked.

Functionality of this tab is very important when using **advanced mode** (refer to the Select IMU placement paragraph) or **pan axis stabilization** and has direct impact on the stabilization loop output and thus on the behavior of your gimbal. Luckily, in most cases such configuration is required only once for each setup since further tuning can be made using the **Tuning** tab.

If you own one of the gimbals listed in the **Gimbal model** field it can be enough to select it and use presets that were prepared by the controller's manufacturer itself. List of the gimbals will be

gradually updated by the internet update function to handle new models.

In case your gimbal is not present on the list you can still use presets from the **Preset** field to set coarse configuration for every axis and then adjust PID parameters experimentally to achieve best performance.

Before changing PID configuration it's recommended to revert all changes on the **Tuning** tab to the defaults which means set **Aggressivity** to 40%, **Smooth** to 0%, **Sensitivity** to 90% and **Speed** to 100%.

Remember to be very **careful** during manual **tuning** and keep PWM outputs power connector nearby to **depower** the servos in case of major instability.

There is always a risk that despite many efforts and extensive PID tuning you will not achieve satisfactory results. In that case you will have to rethink your gimbal's construction and for example change servos to faster models with more torque, less deadband and better resolution or even modify axes gears. Eventually, you should try simple stabilization mode (refer to the Select IMU placement paragraph).

Finally, a few words about the stabilization algorithms that are available via the **Algorithm** field.

Basically, there are three, major types of them (A, B and C) where each one has **P** factor calculated other way. Consequently, algorithms with the **D** suffix have slightly modified **D** factor calculation.

General type A is the most "aggressive" one and can usually be applied only if servo with internal or external pot is used. Moreover, for the higher gear ratios servo has to be very fast and with enough torque to quickly respond to the change of its PWM steering input. Practically, for that type only the **P** and **D** factors are to be changed during tuning.

Types B and C are more universal and should work even if type A cannot be setup to work without oscillations. For this algorithms **P** and **I** factors play major role and it is often enough to modify them and leave **D** factor default.

Generally, at first always try to modify **P** factor leaving remaining parameters at the default levels for the given type of the preset. Then, you can proceed to the next factor, that is **D** for the A algorithm or **I** for the B and C algorithms. Usually, you will have to return to the **P** factor after that and repeat whole sequence some more times to fine tune axis behavior.

For servos without potentiometers you can enable **Center aligned** checkbox to inform the controller to not increment axis outputs by the value returned from the PID algorithm but rather add that value to the outputs middle position.

To perfectly refine PID settings you can use Inflight mode that allows you to modify PID parameters from your radio during flight. Such function is available at the Miscellaneous tab (refer to the Miscellaneous tab section).

Gimbal Model – selects preset for the particular gimbal model

Axis -> Preset – selects preset for the particular gear type

Axis -> Algorithm – selects stabilization algorithm to use

Axis -> P – proportional part of the stabilization algorithm

Axis -> I – integral part of the stabilization algorithm

Axis -> D – derivative part of the stabilization algorithm



Axis -> Maximum I – maximum value of the integrated error (due to I factor)

Axis -> Center aligned – if checked outputs are not incremented (for servos without pots)

**Roll** and **Tilt** panels are disabled if mounting type is set to *frame* at the Select IMU placement window (simple stabilization mode).

## Miscellaneous tab

The screenshot shows the 'Miscellaneous' tab of a flight controller configuration interface. It features three main panels: 'Sensors', 'Voltages', and 'Inflightor'. The 'Sensors' panel has 'Filter levels' with 'Gyro filter' at 'Level 1' and 'Accel filter' at 'Level 3', and 'Dynamic filtering' unchecked. 'Startup calibration' has 'Zero gyro readings' checked and 'Zero roll&tilt levels' unchecked. 'Instant calibration' has buttons for 'Gyro zero readings', 'Accelerometer levels', and 'Temperature compensation'. The 'Voltages' panel shows 'Current values' for 'Controller' at '4,3 V' and 'Servos' at '0,0 V'. 'Voltages constraints' have 'Controller min' and 'Servos min' both at '0,0 V'. 'Disabled types' have 'Roll disabled', 'Tilt disabled', and 'Pan disabled' dropdowns. The 'Inflightor' panel has an 'Activation' button, 'Tuned axis' set to 'Roll', 'Tuned tab' set to 'Tuning', 'Aggressivity' set to '0' (range 0-50), 'Smoothing' set to '54' (range 54-100), 'Sensitivity' set to 'HIGH', and 'Save' and 'State' buttons.

Miscellaneous tab lets you configure three, separate groups of the controller's functions.

**Sensors** group can be used to configure sensor reading filtering properties, change startup calibration procedures and at last run instant calibration routines.

You may want to raise sensors filtering levels in case IMU board is exposed to high frequency vibration and stabilization behaves abnormally. Otherwise, you should set **Gyro** and **Accel filter** field value *possibly low* to achieve maximum gimbal responsiveness (lower value means less filtering and quicker response). Be aware that too high value can cause angles drifting and improper stabilization.

**Dynamic filtering** algorithm can be activated in case you prefer aggressive style of flying and noticed that gimbal levels are getting fuzzy.

**Zero gyro readings** checkbox is active by default what means every time you power on the controller or connect it to the configurator gyro sensor's zero level will be calibrated (red led will blink). Thus, you cannot move IMU board and the whole gimbal till controller will fully initialize. If you don't want to be concerned about motionless startup deactivate that option. You must be aware though, gyros are very sensitive devices and calculated angles can **drift** if not properly calibrated. You can also enable startup calibration for roll and tilt axis using **Zero roll&tilt levels** fields but doing this you enable controller to hold roll and tilt levels that are set on the startup (advanced mode only).

You can also instantly reset gyro zero and accelerometer levels using the **Instant calibration** panel.

Note that due to sensor temperature drift it is strongly recommended to leave controller on for a few

minutes in the flight environment and then restart the controller to perform gyro startup calibration once again.

**Voltages** group allows you to monitor controller's voltages and additionally configure low voltage battery protection.

Minimum voltages constraints can be set using **Controller min** and **Servos min** inputs. Whenever one of these voltages will drop below minimum **green** led will start to blink and disabled types will be activated. If **Disabled types** are not selected stabilization will continue working.

**Inflightor** group enables you to perform gimbal behavior tuning during flight.

To set it up you must choose axis you want to tune using **Tuned axis** field, assign input channels to modify selected properties (properties group can be switched with the **Tuned** tab field) and set **Min** and **Max** values to limit available ranges. Lastly, select input that will **Save** modified values if selected channel **State** is triggered.

To run controller in the Inflightor mode you have to toggle **Activation** button, save settings and restart the controller after disconnecting by depower/power sequence.

To simplify tuning process you can simply connect Remzibi OSD (ARДУv1.73 firmware) to the controller's communication port (TX/RX/GND) and that way you will see values handled by the Inflightor right on the screen.

For security reasons all other inputs **assignments** (at the **Assignment** tab) will be **disabled** after Inflightor is activated.

Sensors -> Gyro filter – selects level of the internal gyro filtering

Sensors -> Accel filter – selects level of the internal accelerometer filtering

Sensors -> Dynamic filtering – enables dynamic filtering algorithm

Sensors -> Zero gyro readings – enables gyro startup calibration

Sensors -> Zero roll&tilt levels – enables accelerometer base roll and tilt levels startup calibration

Sensors -> Gyro zero readings – opens **Calibrate gyro** window

Sensors -> Accelerometer levels – opens **Calibrate accel** window

Sensors -> Temperature compensation – opens **Temperature compensation** window

Voltages -> Controller – displays controller main voltage

Voltages -> Servos – displays servos input voltage

Voltages -> Controller min – defines controller voltage under which controller will use **Disabled types**

Voltages -> Servos min – defines servos voltage level under which controller will use **Disabled types**

Voltages -> Roll disabled – selects disabled type for the roll axis in case voltage is below minimum

Voltages -> Tilt disabled – selects disabled type for the tilt axis in case voltage is below minimum

Voltages -> Pan disabled – selects disabled type for the pan axis in case voltage is below minimum

Inflightor -> Activation – activates inflightor function

Inflightor -> Tuned axis – selects axis to modify

Inflightor -> Tuned tab – selects group of parameters to modify (source tab)

Inflightor -> Aggressivity – selects input to use for **Aggressivity** factor modification

Inflightor -> Smoothing – selects input to use for **Smoothing** factor modification

Inflightor -> Sensitivity – selects input to use for **Sensitivity** factor modification

Inflightor -> Factor P – selects input to use for **P** factor modification


Inflightor -> Factor I – selects input to use for **I** factor modification

Inflightor -> Factor D – selects input to use for **D** factor modification

Inflightor -> Save – selects input to save modified values to the persistent memory

Inflightor -> State – defines input state to trigger **Save** function

## Calibrate gyro

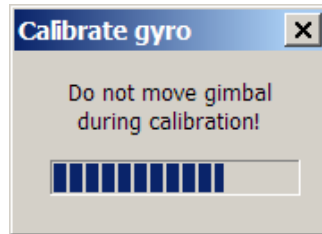


Allows instant gyro calibration.

Gimbal plate with the IMU board does not have to be leveled to perform calibration but must not be moved during that process.

After calibration is done all changes to the controller are saved automatically.

## Calibrate accel

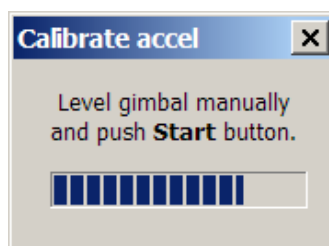

Allows instant accelerometer roll and tilt base levels calibration.


Gimbal plate with the IMU board has to be leveled to perform calibration and must not be moved during that process.

After calibration is done all changes to the controller are saved automatically.

Note that this function sets horizon only in the advanced mode, in the simple mode you have to refine horizon using trims at the **Tuning** or **Outputs** tabs.

Note that Roll and Tilt trims at the **Tuning** tab are reset during level calibration.

## Temperature compensation

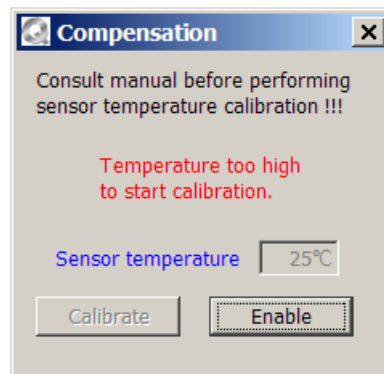

Compensation window lets you calibrate IMU sensor to compensate angles temperature drift which is especially noticeable in the below zero conditions.

Before final calibration you should perform a few IMU freeze-heat cycles (best done in  $-20^{\circ}\text{C} \div 40^{\circ}\text{C}$  range) to smooth out sensor readings.


Next, cool down IMU module to the temperature below  $-10^{\circ}\text{C}$  ( $-20^{\circ}\text{C}$  recommended), place it in the horizontal position, connect to the controller and hit **Calibrate** button. Remember to **not move** the sensor during the whole process. At first let the IMU to heat up slowly but when the temperature is over  $20^{\circ}\text{C}$  you can use an external heat source (such as lamp) to warm it up to the final  $35^{\circ}\text{C}$ .

If you get **Temperature out of range** message after you connect frozen (to below  $-20^{\circ}\text{C}$ ) IMU module just wait until the temperature increases to start calibration.

Note, that the calibration data is stored in the controller and valid only for one IMU module so if you change the module you have to recalibrate.

Calibration data is erased after you reset the controller using **Reset settings** menu function.

## Controller tab

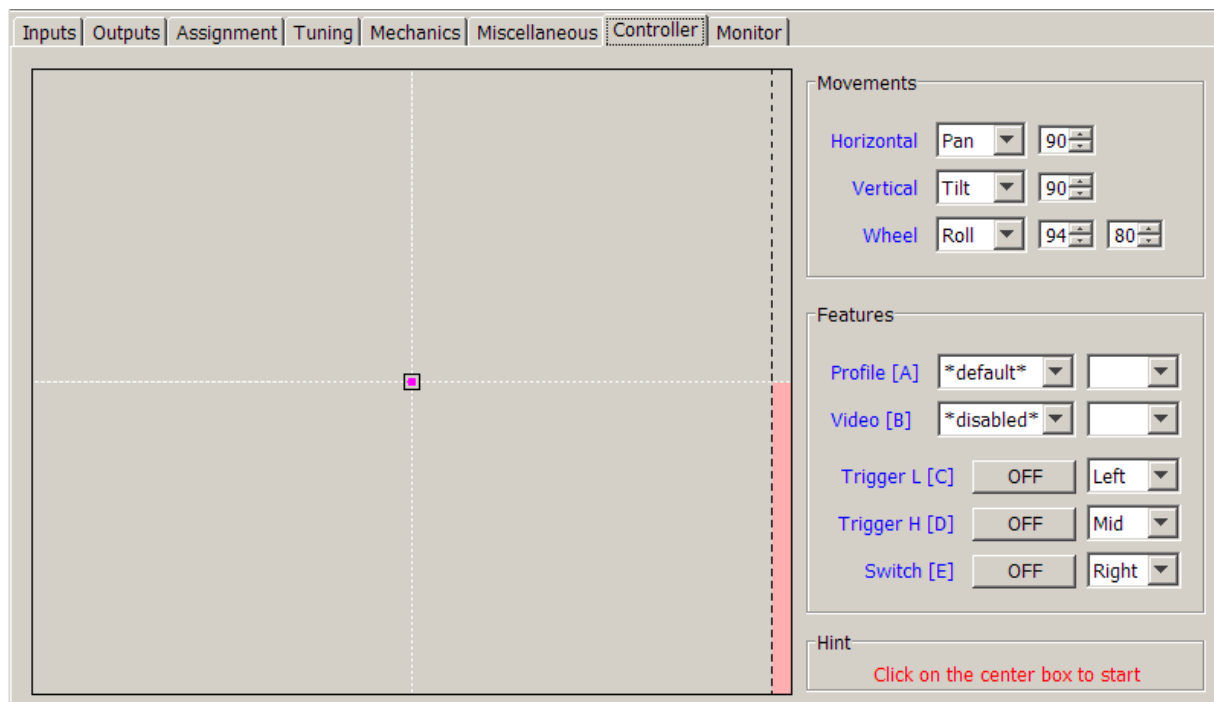

The **Controller tab** lets you control some major functions of the device without the need to assign them to the input channels using the **Assignment tab**. What's more, current assignments are disabled when this tab is open.

Using the **Movements** group you can configure the way mouse motion will transfer to the gimbal movement. Thus, you can set gimbal axis for the **Horizontal** and **Vertical** mouse shift and also the axis which will correspond to the mouse **Wheel** scroll. For each axis smooth factor (second field) can be applied as well to make gimbal movements more fluid. Wheel setup has the additional field added to specify amount of axis inclination change for one wheel step.

To start controlling gimbal movement using a mouse you have to left-click on the center of the small, black box placed in the middle of the controller pad. The magenta dot and the pink bar are indicating real horizontal, vertical and wheel inputs position which are calculated using corresponding smooth factors.

Note, that stabilization disabled types on the **Tuning tab** must allow gimbal to move similarly as in the normal operation mode.

**Features** group allows to instantly call some of the controller's features, namely, change one of the assigned profiles, switch to one of the assigned inputs, trigger infrared sequence for LOW or HIGH states and close in-build relay switch.

What's more, you can even assign shortcut keys to the listed functions by placing the cursor over the current shortcut key in the rectangular brackets and pressing alternate one on the keyboard. Finally, using select fields in the last column you can define mouse buttons that will trigger selected functions.

Both, shortcuts and mouse buttons will work only if controller pad is active which means after left-click on the center of the controller pad. You can deactivate controller pad and release mouse cursor by pressing "X" button on the keyboard.

If you want to maintain activation state for the longer time just hold the appropriate key/button for more than two seconds and then release it.

**Movements -> Axis** – selects axis bound to the mouse function

**Movements -> Smooth** – sets smooth factor for given function

**Movements -> Wheel amount** – sets move amount for the one wheel step

**Features -> Profile** – selects active profile from the assigned ones


**Features -> Video** – selects active video input from the assigned ones

**Features -> Trigger L** – triggers infrared sequence assigned to the LOW state

**Features -> Trigger H** – triggers infrared sequence assigned to the HIGH state

**Features -> Switch** – activates reed relay

## Monitor tab

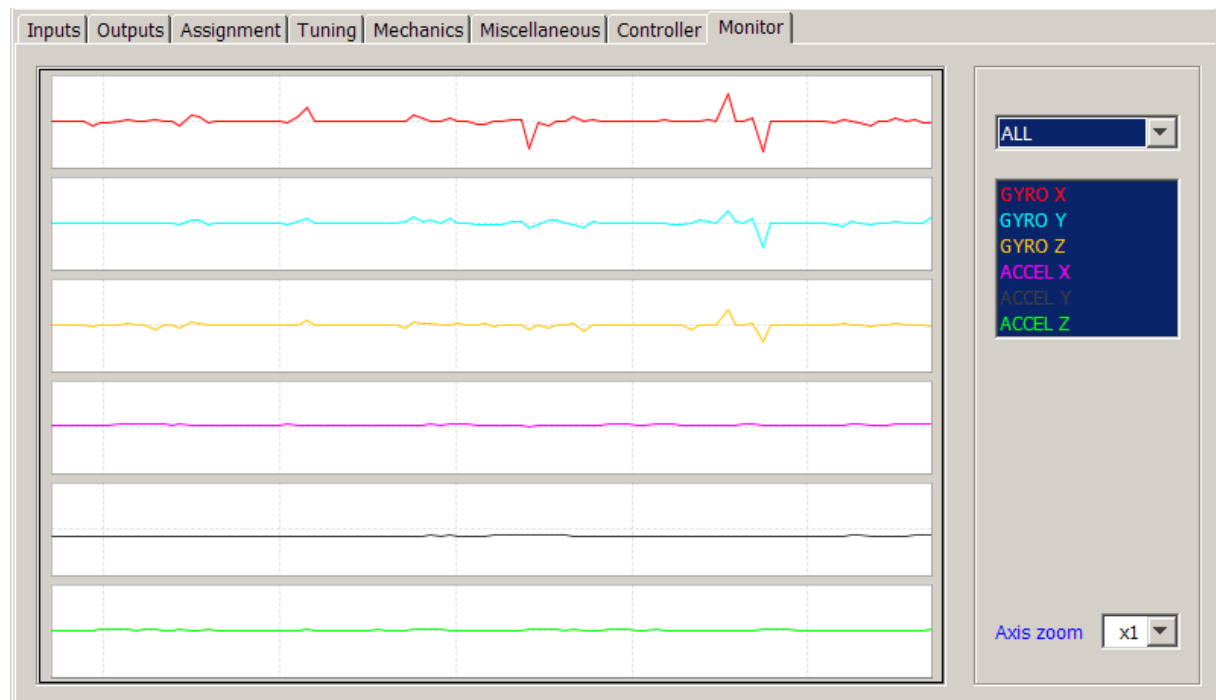

Monitor tab displays live output from the gyro and accelerometer sensors. Thus, you can monitor whether they are working and returning reasonable values.

For your convenience you can even select the graphs you want to show and change its scale using **Axis zoom** field.

Charts group – selects group of charts to display

Chart selector – selects individual charts to display

Axis zoom – scale factor for displayed charts

## Initialization

After unboxing the controller you have to gently connect it with the sensor board and plug to the computer using supplied mini USB cable. Then, onboard leds should start to blink and the operating system will install FTDI drivers to make the new communication port (COM) available.

After that, you should unpack configuration program to the folder where it can be easily accessible. We recommend doing this on the removable drive e.g. pendrive to make switching to other computers simpler (remember, that some controller's configuration data is stored directly in the application folder).

Finally, run the program and make connection to the controller active by clicking the **Connect** button and selecting appropriate communication port. To verify if sensors are working properly switch to the **Monitor** tab and make sure all graphs are changing their values when moving the sensor board.

After initial testing is done unplug the USB cable and install the controller at the gimbal frame. For now, it will be enough to fasten the sensor board at the camera plate and connect all servos to their output pins. Ideally, IMU board should be placed somewhere near the middle of the plate (e.g. just below the camera) and of course in one of the supported positions (consult External IMU paragraph for more information). Roll axis servo has to be connected to the output pin #1, tilt axis servo to the output pin #3 and optionally pan servo to #5.

**Very important thing is not to power the servos until it will be clearly written to do so!**

After everything is firmly fixed connect the controller to the configurator, **select your current IMU board orientation** using the Select IMU placement window and save changes with the **SAVE SETTINGS** button. We are strongly suggesting that you should start with the frame mode (IMU sensor set on the frame) because its setup is simple and gives very good results (note, that this mode works only for servos with internal or external pots).

If there already exists prepared settings file for your gimbal you have to import it using the File->Import menu item and all desired options should be set automatically. Otherwise, you have to configure initial settings manually.

Configuration is dependent on the gimbal model and mode you are going to use.

### **Frame mode**

At first you have to be sure your servos have internal or external potentiometers connected to use that mode, otherwise use plate mode.

You can now **carefully connect power to the servos line** and enable roll stabilization at the **Tuning** tab by selecting first, empty item on the **Stab. disabled** list. Next, move gimbal in the roll axis and at the same time change **Proportional** field value for that axis to compensate movement.

At last enable stabilization for the tilt axis and set suitable proportional value.

Now, you can modify **Aggressivity** settings for both axes to fine tune gimbal behavior.

### **Plate mode**

Start from the **Mechanics** tab where you can select the model your gimbal is similar to or just choose single preset for every axis. Then, go to the **Tuning** tab and **disable** all axes, first one (Roll in that case) with the *Servo middle* setting and the other two with the *PWM off*.

Now, switch to the **Outputs** tab and **carefully connect power to the servos line**. In case you are using servo without internal or external pot you must ensure it is **not moving** at all at this stage. Otherwise, modify **Trim** value for the first output (Roll #1) to find the real servo center at which the servo is not rotating.

If everything is ok at this stage you are ready to enable stabilization for the first axis but before doing this **disconnect servos power** for security reasons. Then, go to the **Tuning** tab and select first, empty item on the **Stab. disabled** list for roll axis and return to the **Outputs** tab.

Now, you can **carefully power the servos** but if roll axis (and the corresponding output slider) will immediately start to run in one direction without any sight of stabilization you have to quickly depower the servos to avoid mechanical damages. In that case you have to enable **Invert** checkbox for #1 output to revert servo direction and try to power the servos once again.

After stabilization is roughly working for the first axis you should switch to the **Mechanics** tab and tune PID's values to achieve best result (refer to the Mechanics tab paragraph).

Finally, repeat above steps for the other axes and refine the stabilization with the **Tuning** tab.

At the end you can connect your RC receiver, **Calibrate** it and assign to the appropriate features.



# Troubleshooting

Problem	Possible cause	Action needed
configurator did not start	Java 1.6 or later not installed operating system problem	install Java JRE 1.6 or later check error log files in the "log" folder
could not connect to controller	FTDI drivers not installed serial connection library error operating system problem	verify if new COM port is visible after controller is connected with the supplied USB cable manually install FTDI drivers check error log files in the "log" folder
green status led is blinking	voltages constraints reached	examine <i>Miscellaneous-&gt;Voltages</i> section
red status led is blinking	sensor communication errors	check sensor cable move nearby transmitters away restart the controller
green status led is on red status led is on	performance issues	check sensor cable restart the controller contact manufacturer
green status led is off red status led is on	serious hardware failure	restart the controller contact manufacturer
servos are not moving	no enough voltage PWM outputs disabled	verify if enough voltage is supplied examine <i>Outputs-&gt;Stab. disabled</i> fields
stabilization behaves abnormally	sensor calibration inaccurate incorrect IMU placement set sensor communication errors	examine <i>Tools-&gt;IMU placement</i> window calibrate sensor once again move nearby transmitters away restart the controller
gimbal plate is off the horizon	accelerometer not calibrated incorrect angle trims incorrect output trims	calibrate levels at <i>Miscellaneous-&gt;Sensors tab</i> correct angle trims at <i>Tuning</i> tab correct output trims at <i>Outputs</i> tab
angles are drifting	gyro not calibrated properly sensor temperature drift	enable startup gyro calibration <i>Miscellaneous-&gt;Sensors tab</i> if disabled do not move gimbal plate during statup enable <i>Temperature compensation</i>
everything is wrong ;)	inconsistent or wrong settings	reset all controller's settings to the default using <i>Tools-&gt;Reset settings</i> menu item

# Specification

## Controller

Input voltage	7V ÷ 20V (onboard regulator may get hot if above 12V)
Working current	110mA
Dimensions	85mm x 48mm x 12mm
Weight	25g
Operating temperature	-10°C ÷ 50°C

## Sensor

Input voltage	5V
Working current	10mA
Dimensions	35mm x 35mm x 15mm
Weight	15g
Operating temperature	-10°C ÷ 50°C

## Features

PWM inputs	50Hz refresh rate, PWM/PPM automatic switching
PWM outputs	50/100/200/400Hz switchable refresh rates
Video switch	75Ω inputs/output, high speed, low glitch
Infrared trigger	33/36/38/40/56Khz and constant carrier rates supported
Reed relay	max 1A/250VDC
Angle accuracy	max ±0.01°, user selectable
Controlled range	roll axis: ±40°
	tilt axis: ±360° (continuous rotation)
	pan axis: ±360° (continuous rotation)